


stryker[®]

Crossfire[®] 2

Integrated Resection and Energy System

REF 0475-100-000

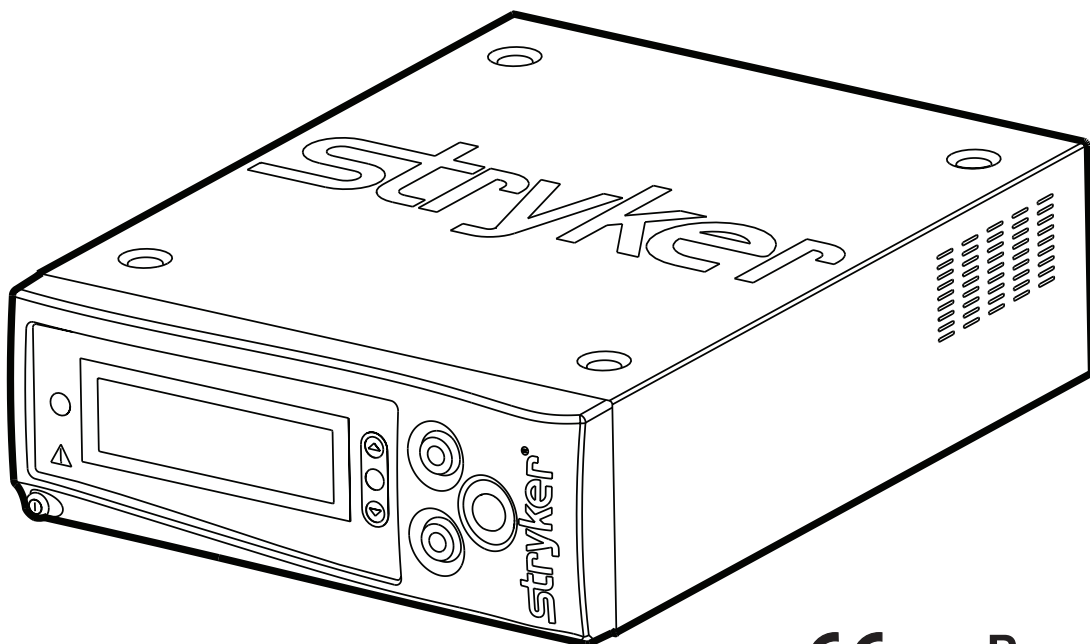

CE₀₁₉₇ Rx ONLY

Table of Contents

Warnings and Cautions	3
Product Description/Intended Use	6
Indications	7
Contraindications	7
Package Contents	7
Available Accessories	7
The Crossfire 2 Console	8
Setup and Device Connections	11
Connecting to the iSWITCH Wireless Footswitch	13
Operation	14
Powering the Console On and Off	14
Adjusting User and System Settings	15
Arthroscopy Shaver Controls	16
RF Ablation Controls	19
Dual Controls	23
Troubleshooting	25
Error Codes	26
Cleaning and Maintenance	27
Cleaning	27
Maintenance	27
Disposal	28
Technical Specifications	29
Generator Output	30
Classifications	32
Radio Equipment Directive Compliance	33
Electromagnetic Compatibility	34
Symbols	37

Warnings and Cautions

R_X ONLY Caution: Federal law (USA) restricts this device to use by, or on order of, a physician.

Operator Profile

The Crossfire 2 system is intended for use only by licensed medical professionals, properly trained in the use of arthroscopic and electrosurgical equipment and techniques. The Crossfire 2 system generates potentially hazardous levels of energy that can result in injury or even death if improperly used.

General Warnings

To avoid potential serious injury to the user and the patient, observe the following warnings:

1. Read this manual thoroughly and be familiar with its contents prior to operating the equipment.
2. Carefully unpack the device and ensure that all components are accounted for and remain undamaged from shipment.
3. Inspect all handpieces and probes for damage to the cable insulation. If damage is found, refer to the Stryker Standard Warranty and Return Policy (1000-401-175).
4. Before using the Crossfire 2 system in an actual procedure, verify that each component is installed and functioning properly. Improper connection may cause arcing or malfunction of the handpiece or console, which can result in injury, unintended surgical effect, or product damage.
5. Do not use the Crossfire 2 system on patients with cardiac pacemakers or other electronic device implants. Doing so could lead to electromagnetic interference and possible death.
6. Do not attempt to reuse or resterilize any product labeled "Single-Use," as this may lead to equipment malfunction, patient/user injury, and/or cross-contamination.
7. Shaver handpieces are provided nonsterile and must be cleaned and sterilized prior to each use, according to the reprocessing instructions provided in the handpiece manual.
8. Do not use the Crossfire 2 system with non-conductive irrigants (e.g. sterile water, air, gas, glycine, etc.). Use only conductive irrigants such as saline or Ringer's lactate in order for the system to function properly.
9. Do not activate the Crossfire 2 system for prolonged lengths of time when the attachment is not in contact with tissue. Doing so may lead to unintentional damage to surrounding tissue.
10. Do not obstruct the fans located near the rear and side of the console. Position the console so the fan directs the flow of air away from the patient.
11. Keep the activation indication lights and speaker in field of view and hearing at all times during activation. The light and sound are important safety features.

Fire/Burn Warnings

1. Do not use this device in the presence of flammable anaesthetics, gases, or fluids, such as skin prepping agents and tinctures. Observe appropriate fire precautions at all times.
2. To prevent the risk of explosion, do not use this device in oxygen-enriched atmospheres, nitrous oxide (N₂O) atmospheres, or in the presence of other oxidizing agents. Ensure that oxygen connections in the surgical environment are not leaking.
3. Electrosurgical components, such as the RF probe, may remain hot after activation. To avoid combustion, keep all electrosurgical equipment away from flammable materials.
4. Do not use flammable agents for cleaning and disinfection of the Crossfire 2 console, handpiece, or footswitch.
5. To prevent the risk of fire, do not replace console fuses. If it is suspected that fuses are damaged, return the console to Stryker for repair.

Electrical Safety Warnings

1. Install this device in an operating room that complies with all applicable IEC, CEC, and NEC requirements for safety of electrical devices.
2. Crossfire 2 system components are designed to be used together as a system. Use only the appropriate footswitch, handpiece, and disposable attachments described in this manual.
3. When the Crossfire 2 system is activated, the conducted and radiated electrical fields may interfere with other electrical medical equipment. Provide as much possible distance between the console and other electronic medical equipment.
4. Connect the power cord to a grounded receptacle. To prevent risk of electric shock, do not use extension cords or adapter plugs.
5. Do not wrap the handpiece cable around metal objects, or the induction of hazardous currents may result.
6. Keep the ends of the handpiece cable connectors, footswitch cable connectors, and console receptacles away from all fluids.
7. During use, the RF and shaver handpieces generate electronic noise that may interfere with EKG readings. Before responding to any erratic EKG readings, first power down the system to ensure the readings are not the result of system noise.

Electrosurgery Warnings

1. Inspect electrosurgical accessories for defects prior to use. Do not use any cable or electrode that is cut, broken, or otherwise damaged, as burns or electric shock may result.
2. Position the cables to avoid contact with the patient, electrodes, cables, and any other electrical leads that provide paths for high frequency current.
3. To prevent the risk of shock, do not allow the patient to come into contact with grounded metal objects or objects that have an appreciable capacitance to the earth, such as a surgical table frame or instrument table. The use of antistatic sheeting is recommended for this purpose.

4. When the Crossfire 2 system and physiological monitoring equipment are used simultaneously on a patient, position any monitoring electrodes as far as possible from the surgical electrodes. Monitoring equipment using high frequency, current-limiting devices is recommended. Needle monitoring electrodes are not recommended.
5. During use, operators should wear standard surgical gloves to help reduce the risk of electric shock.
6. To prevent patient injury, select the lowest output power required for the intended purpose.
7. Do not exceed the rated accessory voltage of electrosurgical accessories. Only use electrosurgical accessories that have a rated accessory voltage equal to or greater than the maximum output voltage of the generator.
8. Do not activate the Crossfire 2 system until the probe is properly positioned in the patient.
9. Ensure that the probe tip, including the return electrode, is completely surrounded by irrigant solution during use.
10. Maintain the active electrode in the field of view at all times to avoid tissue damage.
11. Keep active electrodes isolated from the patient when not in use.
12. When not in use, remove the handpiece and disposable attachments from the surgical site and place them away from metallic objects. Attachments should be separated from other electrosurgical equipment to avoid inadvertent electrical coupling between devices. Inadvertent activation may cause user/patient injury and/or product damage.
13. Failure of the system may result in an unintended increase in output power.
14. Neuromuscular stimulation may occur when RF probes are used.
15. Smoke generated during electrosurgical procedures may be harmful to surgical personnel. Take appropriate precautions by wearing surgical masks or other means of protection.

Cautions


To avoid product damage, observe the following cautions.

1. While using the handpiece, do not touch the attachment to metal objects, such as an endoscope or metal cannula. Damage to the attachments or other devices may result.
2. Attempt no internal repairs or adjustments, unless specified otherwise in this manual. Units requiring repair should be returned to Stryker.
3. Pay close attention to the care and cleaning instructions in this manual. Failure to follow these instructions may result in product damage.
4. Do not remove the cover of the console as this could cause electric shock and product damage.

Product Description/Intended Use

The Crossfire 2 Integrated Resection and Energy System is a combination powered shaver system/ electrosurgical generator that powers arthroscopic shaver handpieces and RF surgical probes for use in a variety of arthroscopic and orthopedic surgeries.

Illustrated below, the Crossfire 2 system consists of the following components:

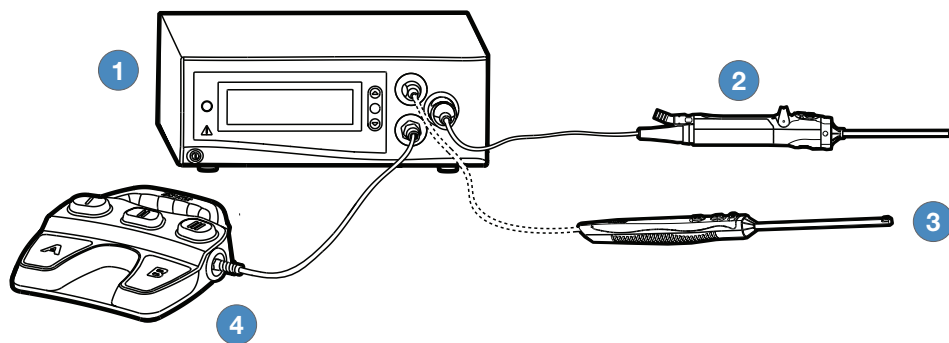


1. **Crossfire 2 Console (featured in this manual)**

- Acts as a connection hub for the various components of the Crossfire 2 system
- Powers a motorized shaver handpiece for the mechanical cutting and debridement of bone and soft tissue
- Generates bipolar radio frequency (RF) energy for electrosurgical cutting and coagulation of tissue
- Provides a central user interface for operating the Crossfire 2 system

2. **Powered Shaver Handpiece (and disposable attachments)**

- Enables arthroscopic cutting and debridement
- Type BF applied part 

3. **Disposable RF Probe**

- Enables RF cutting and coagulation
- Type BF applied part 

4. **Crossfire Footswitch**

Provides remote, foot control of the powered shaver handpiece and RF probe

Indications

The Stryker Crossfire 2 System is intended for use in orthopedic and arthroscopic procedures for the following joints: knee, shoulder, ankle, elbow, wrist, and hip. The Crossfire 2 System provides abrasion, resection, debridement and removal of bone and soft tissue through its shaver blade; and the ablation and coagulation of soft tissue, as well as hemostasis of blood vessels, through its electro-surgical probe. Examples of uses of the product include resection of torn knee cartilage, subacromial decompression, and resection of synovial tissue in other joints.

Contraindications

The electro-surgical probe should not be used in procedures where a nonconductive irrigant is used or with patients having cardiac pacemakers or other electronic implants.

Package Contents

Carefully unpack the Crossfire 2 console and inspect each of the following components.

- (1) Crossfire 2 Console
- (1) Hospital-grade power cord
- (1) User Guide

If damage is found, refer to the Stryker Standard Warranty and Return Policy (1000-401-175).

Available Accessories

The Crossfire 2 system is compatible with the following accessories:

System Accessories

0475-000-100	Crossfire Footswitch
0277-200-100	iSWITCH Universal Wireless Footswitch Receiver
0277-200-101	iSWITCH Universal Wireless Footswitch Receiver (AUS)
0277-100-100	iSWITCH Universal Wireless Footswitch
6000-001-020	Stryker firewire cable

Arthroscopy Accessories


0279-xxx-xxx	SERFAS Energy family of electro-surgical probes
0375-708-500	Formula 180 Handpiece
0375-704-500	Formula Handpiece (with buttons)
0375-701-500	Formula Handpiece (without buttons)
0275-601-500	Small-Joint Shaver Handpiece







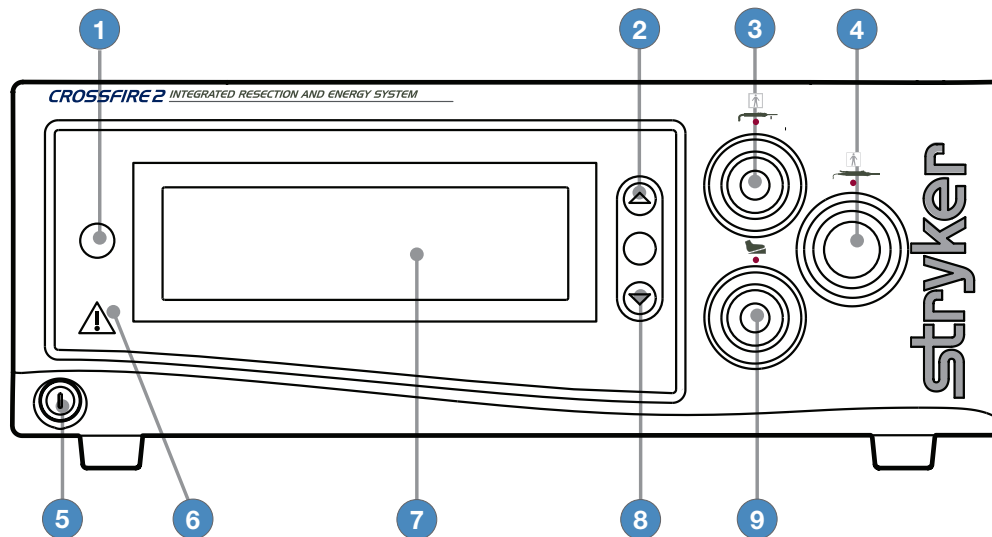

The Crossfire 2 Console

The Crossfire 2 console is the connection hub for the components of the Crossfire 2 system. It generates RF energy for ablation, powers motorized shavers, and provides user controls and system feedback.

Front Panel


The front console panel features ports for connecting handpieces, controls for adjusting handpiece settings, and an LCD screen to provide system feedback.



- | | | |
|---|--|---|
|  | 1. Menu | Selects menu items |
|  | 2. Select | Selects which device displays on the LCD screen. |
|  | 3. RF connector (SERFAS Energy) | Delivers RF energy for ablation handpieces |
|  | 4. Handpiece connector | Powers shaver handpieces |
|  | 5. Power | Powers the console on and off |
|  | 6. Error indicator | Shines red to indicate errors (error details appear in the LCD) |
| 7. LCD screen | Provides system feedback | |
|  | 8. Adjust | Adjusts options for connected devices |
|  | 9. Footswitch connector | Connects to the Crossfire Footswitch |

Rear Panel

The rear panel provides ports for connecting the console to other Stryker equipment.

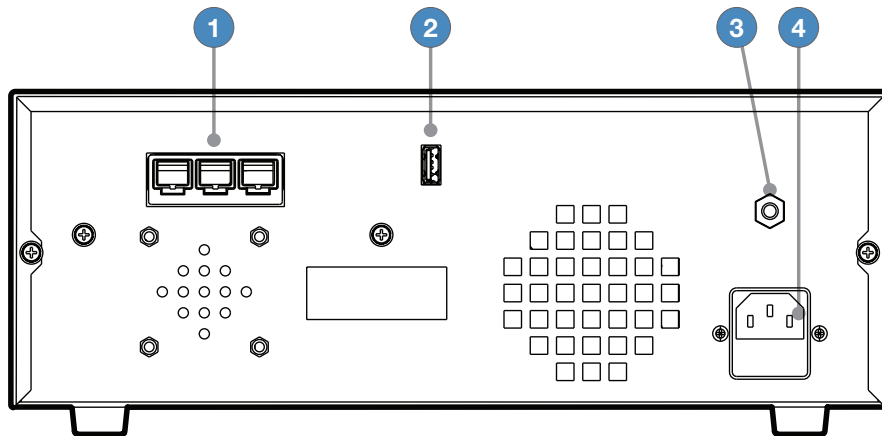

1. **Firewire Connectors**

Enables connection to other Stryker Firewire devices, such as the iSWITCH Universal Wireless Footswitch



2. **USB Drive**

Enables software installation from authorized service personnel



3. **Equipotential Ground Plug**


—

4. **AC Power Inlet**

—

Interface

The Crossfire 2 interface displays system status, enables you to choose between RF ablation and shaver modes, and enables you to adjust power and speed settings. Activating the actual handpieces is performed through controls on the handpiece and on the Crossfire Footswitch.

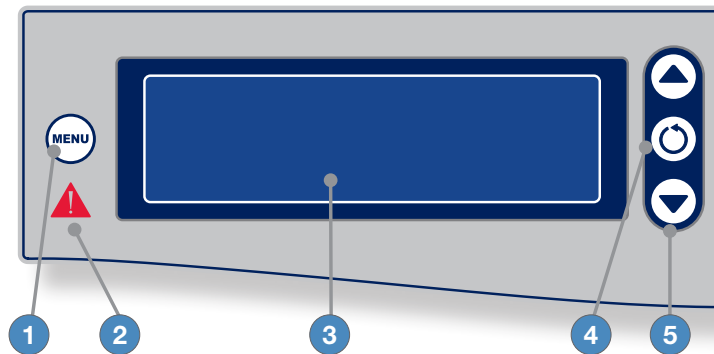

1. Menu

The **Menu** button opens a menu for selecting user and system settings.

2. Error indicator

The **Error indicator** shines red when a system error occurs.

3. LCD screen

The **LCD screen** displays system status, error codes, mode of operation, cutting speed, and power levels.



4. Select

The **Select** button toggles between RF and Shaver controls. The selected device can then be controlled using the Crossfire 2 interface.



5. Adjust

The **Adjust** buttons increase/decrease speed and power settings for the selected device.

Setup and Device Connections


Stryker Endoscopy considers instructional training an integral part of the Crossfire 2 system. Your Stryker Endoscopy sales representative will perform at least one inservice at your convenience to help you set up your equipment and instruct you and your staff on its operation and maintenance. Please contact your local Stryker Endoscopy representative to schedule an inservice after your equipment has arrived.

 **Warning**

- Be sure that no liquid is present between connections to the console and the handpiece. Connection of wet accessories may lead to electric shock or electrical short.
- To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.
- Use only hospital-grade power cables. Using other cables may result in increased RF emissions or decreased immunity from such emissions.
- Only the handpieces and disposable attachments are suitable for use in the patient environment. The console and footswitch are not sterile devices and should not enter the sterile field.
- The Crossfire 2 System is compatible only with the Stryker handpieces and footswitches listed in this manual. Do not connect any equipment not specified in this manual, as unexpected results or serious injury will occur.
- The separable AC power cord is provided as a means of emergency shutdown and disconnection from the power source. Do not position the console in a way that is difficult to disconnect the AC power cord.


1. Place the console on a sturdy platform, such as a Stryker cart.
 - Select a location according to the recommendations in the “Electromagnetic Compatibility” section of this user guide.
 - Leave four inches of space around all sides for convection cooling.
 - Do not obstruct the fans located near the rear and side of the console. Position the console so the fan directs the flow of air away from the patient.
 - Keep the activation indication lights and speaker in field of view and hearing at all times during activation. The light and sound are important safety features.

2. Connect the AC power.

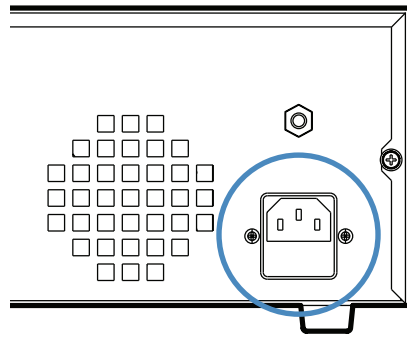


3. Connect the handpieces and footswitch.

Note: The console will display an error message if expired or used attachments are connected:

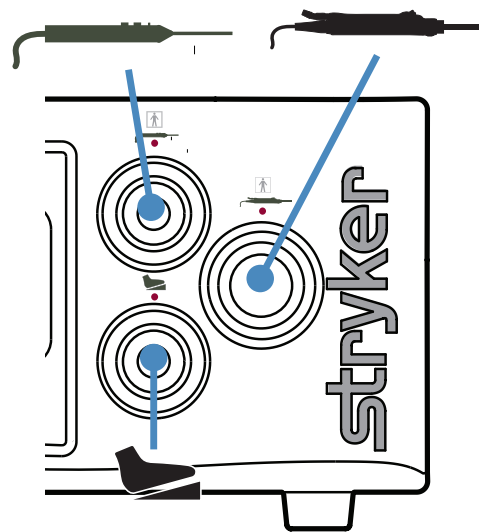


4. Connect suction tubing (for all suction-capable devices).

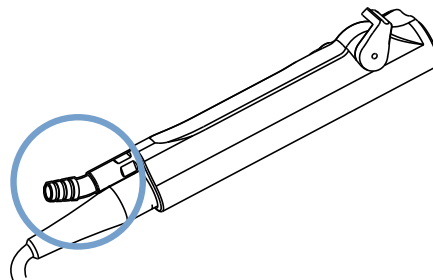

Connecting to the iSWITCH Wireless Footswitch

The Crossfire 2 system can be used with the iSWITCH Wireless Footswitch System.


1. Connect the Crossfire 2 console to the iSWITCH console using one of the Firewire connection ports on each console.
2. Consult the iSWITCH Operating and Maintenance Manual (P/N 1000-400-700) for further operation instructions.

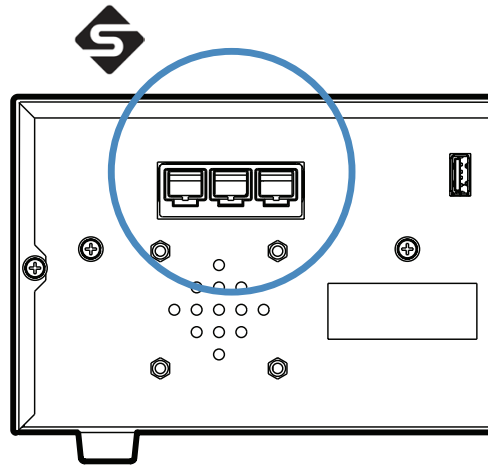

Operation

Powering the Console On and Off

Press the power button to power the console on and off. The button will shine green when the console is on.

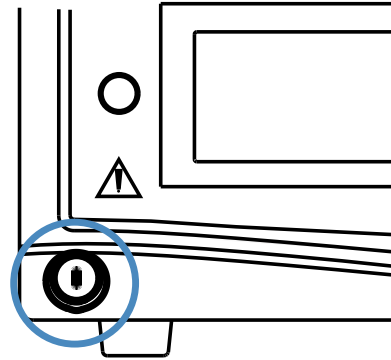






Note: Should emergency shutdown become necessary, power off the console as described above. As an added safety measure, the console can be separated from the AC power mains by detaching the AC power cord from either end.


Adjusting User and System Settings

User Preference Settings

User preferences, such as power and cutting speeds and button assignments for the handpiece and footswitch, can be adjusted through the Crossfire 2 interface.

Select from the default settings provided with the console, or contact your Stryker representative to customize your own.

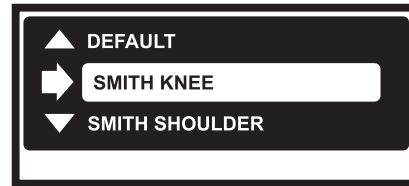

1. Press menu .
2. Press adjust   to select a default setting.
3. Press select  to confirm selection and exit.
Or, press menu  to cancel selection.












Note: User preference settings will not take effect unless a disposable attachment is connected to the shaver.

System Settings

System settings, such as screen brightness, contrast, and system sound can be adjusted through the Crossfire 2 interface.

1. Press and hold menu .
Note: If an RF probe is connected to the console, the COAG adjustment screen will appear. Press menu  again to access the system settings screen.



2. Press select  to choose:
 -  contrast,
 -  brightness, or
 -  sound.The arrow  will indicate your selection.
3. Press adjust   to select a default setting.
4. Press select  to confirm selection and exit.
Or, press menu  to cancel your selection.

Note: A short press will display the current version of the console software.


Arthroscopy Shaver Controls

Arthroscopy shaver handpieces can be controlled by the buttons on the handpiece or by the pedals on the Crossfire Footswitch. The default controls for each are provided below. To customize button assignments, contact your Stryker representative.






Warning

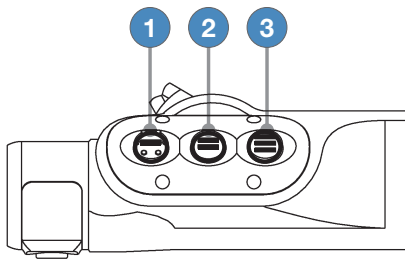- The Crossfire 2 system is intended for use only by licensed medical professionals, properly trained in the use of electro-surgical equipment and techniques. The Crossfire 2 system generates potentially hazardous levels of energy that can result in injury or even death if improperly used.
- Before using the Crossfire 2 system in an actual procedure, verify that each component is installed and functioning properly. Improper connection may cause arcing or malfunction of the handpiece or console, which can result in injury, unintended surgical effect, or product damage.
- During use, operators should wear standard surgical gloves to help reduce the risk of electric shock.
- During use, the RF and shaver handpieces generate electronic noise that may interfere with EKG readings. Before responding to any erratic EKG readings, first power down the system to ensure the readings are not the result of system noise.
- Shaver handpieces are provided nonsterile and must be cleaned and sterilized prior to each use, according to the reprocessing instructions provided in the handpiece manual.


Default Handpiece Controls







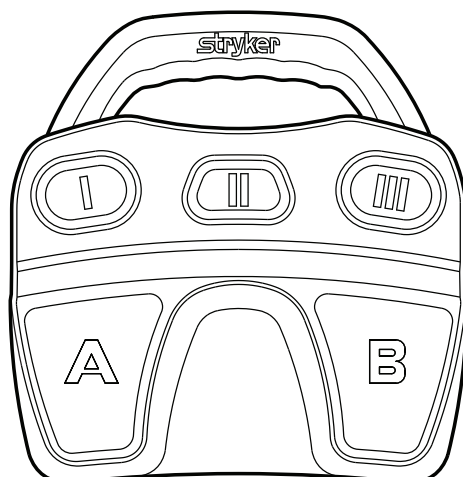

Note: Default settings can be selected in the User Preference Settings screen on the console. Settings will not take effect until a disposable attachment is connected to the shaver handpiece.

Button		Function		
		Default 1	Default 2 / None	Default 3
I	Function	Oscillate	Activate / Deactivate	Oscillate
	Option(s)	 One Touch		 One Touch
II	Function	Forward	Select Mode	Jog
	Option(s)	 One Touch	Oscillate or Forward /Reverse	—
III	Function	Reverse	Forward/Reverse	Forward
	Option(s)	 One Touch	—	 One Touch

Default Footswitch Controls





Button		Function		
		Default 1	Default 2 / None	Default 3
I	Function	Jog	Select Mode	
	Option(s)	—	Oscillate or Forward/Reverse	
II	Function	Select Handpiece		
	Option(s)	RF or Shaver		
III	Function	Select Direction	Select Speed	
	Option(s)	Forward or Reverse	High or Low	
A	Function	Oscillate	Oscillate/Reverse	
	Option(s)	 fixed	 variable	 fixed
B	Function	Forward/Reverse	Oscillate/Forward	
	Option(s)	 variable	 variable	 fixed

Note: When using small-joint handpieces, only Default 2 settings are available. No other defaults or user preferences can be applied.

Console Controls

Adjusting Cutting Speed


Use the adjust buttons   on the console to manually adjust the power or speed setting for the active handpiece.







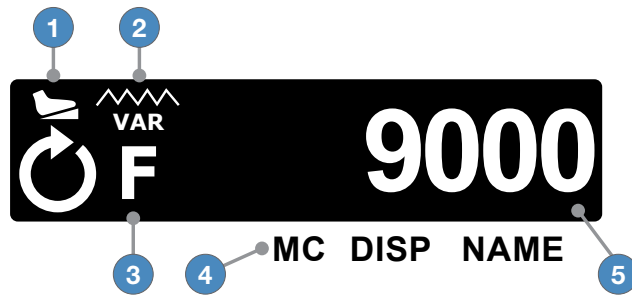


Notes:

- In shaver mode, the console uses radio frequency identification (RFID) to automatically detect which type of disposable attachment is connected to the handpiece. Upon recognition, the console adjusts to an optimal preset cutting speed, direction, and power.
- Forward and reverse settings are adjusted independent of each other. Adjusting settings in one mode will not affect the other.



Reading the LCD

In shaver mode, the LCD will show:



1. Footswitch status		Crossfire footswitch is connected
		iSWITCH footswitch is connected
		no footswitch is connected
2. Footswitch response		One Touch (pressing the foot pedal once activates the shaver to a default speed; pressing the foot pedal again stops the shaver)
		Fixed (pressing the foot pedal at any pressure results in a constant speed)
		Variable (shaver speed varies, depending on the pressure applied to the foot pedal)
		Mix (oscillate speed is fixed; forward/reverse speed is variable)
3. Direction		Forward
		Reverse
		Oscillate
4. Cutter Name	(name)	
5. Speed	(#)	rotations per minute

System Feedback

Event	Audible Feedback	Visible Feedback (via LCD)
Reverse activated	five high beeps	
Forward activated/resumed	low beep	
Adjustments made to speed settings	one beep for each unit of change	Speed indicator number increases or decreases


RF Ablation Controls

RF probes can be controlled by the buttons on the handpiece or by the pedals on the Crossfire Footswitch. The default controls for each are provided below. To customize button assignments, contact your Stryker representative.

Warnings


- During use, the RF and shaver handpieces generate electronic noise that may interfere with EKG readings. Before responding to any erratic EKG readings, first power down the system to ensure the readings are not the result of system noise.
- RF handpieces are intended for single use only and should not be reprocessed or reused.

Default Handpiece Controls

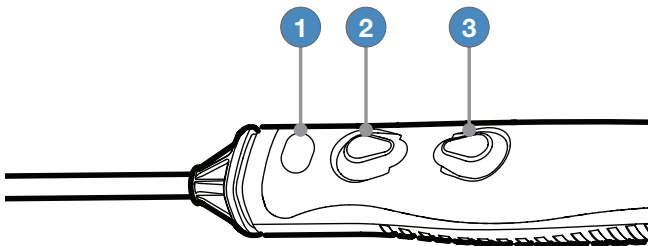

1. Adjust CUT power level (single press)
or
Activate/deactivate Force Modulation (press and hold for three seconds)
2. Activate CUT
3. Activate COAG

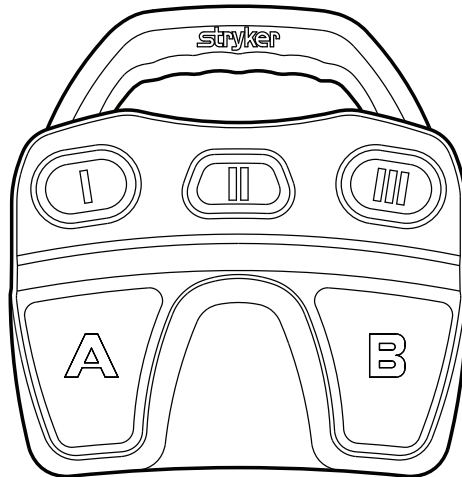

Default Footswitch Controls







Button		Function (Controls are the same for defaults 1, 2 and 3)
I	Function	Decrease Cut Level
	Option(s)	
II	Function	Select Handpiece
	Option(s)	RF or Shaver
III	Function	Increase Cut Level
	Option(s)	
A	Function	Cut
	Option(s)	
B	Function	Coag
	Option(s)	

Console Controls

Adjusting CUT Power

- Press the adjust   buttons on the console
- Press the gray button on the handpiece (increase)
- Press the I (decrease) and III (increase) buttons on the footswitch

Adjusting COAG Power

1. Press and hold menu . The COAG POWER LEVEL screen will appear.
2. Press adjust   to adjust.
3. Press select  to confirm selection and exit.




Note: COAG power can only be adjusted when an RF probe is connected to the console.

Selecting Force Modulation


The Crossfire 2 Console features an additional RF mode known as Force Modulation. Force Modulation is an alternative ablation mode that duty cycles RF output at a low frequency to achieve a lower average power output than in normal CUT mode.







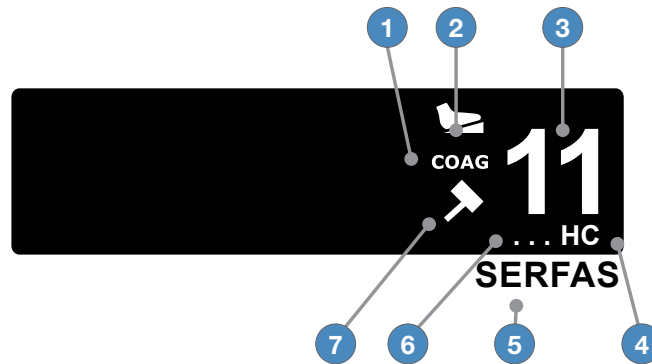


Currently, Force Modulation is an option only with the following SERFAS Energy probes: 90-S, 90-S Max, and Super 90-S.

- To activate Force Modulation, hold down the grey power button on the SERFAS probe for three seconds. A hammer icon  will appear on the LCD screen of the console, indicating Force Modulation activated.
- To deactivate Force Modulation, hold down the grey power button on the SERFAS probe for three seconds. The hammer icon will disappear from the LCD screen.





Reading the LCD

In RF ablation mode, the LCD will show:



1. Mode	 cut mode activated
	 coagulation mode activated
2. Footswitch Status	 Crossfire Footswitch connected
	 iSwitch footswitch connected not connected
3. CUT Power	(#) power setting
4. Hand Controls	 hand control is enabled
	hand control is disabled
5. Disposable RF Probe Name	(name)
6. COAG Power	 low
	 medium
	 high
7. Force Modulation	 force modulation activated
	force modulation not activated

System Feedback



Event	Audible Feedback	Visible Feedback (via LCD)
CUT activated	high, steady tone	
COAG activated	low, steady tone	
Force modulation on / off	Single beep	
System error	Ten short beeps	
Adjustments made to power settings	one beep for each unit of change	CUT power indicator number increases or decreases
Change footswitch to control RF mode	"SERFAS"	"SERFAS" appears
Change footswitch to control Shaver mode	"Shaver"	name of the disposable attachment appears

Dual Controls

In arthroscopic procedures, RF probes and arthroscopic shaver handpieces can be simultaneously connected to the Crossfire 2 system, enabling users to toggle quickly between RF ablation and arthroscopic functions.

Selecting between RF Ablation Mode and Arthroscopic Shaver Mode for Footswitch Control

Selecting a mode will enable the selected handpiece to be controlled by the footswitch. To select the appropriate mode, do one of the following:

- Press select  on the Crossfire 2 interface. The interface will toggle between modes. The device controlled by the footswitch will appear on the right side of the LCD and will be identified by the footswitch  icon.
- Press the toggle button (II) on the footswitch.
Note: Either handpiece can be activated at any time by pressing the button on the handpiece.

Activating a Handpiece


To activate a handpiece in dual mode, do one of the following:

- Press any button on the desired handpiece.
- Press the footswitch pedal for the active handpiece.
Note: The active is identified by handpiece appears on the right side of the LCD.)

Reading the LCD

In dual mode, the LCD will show the status of both devices. Whichever device is controlled by the footswitch will appear on the right side of the LCD.

- dual mode
- shaver handpiece controlled by footswitch

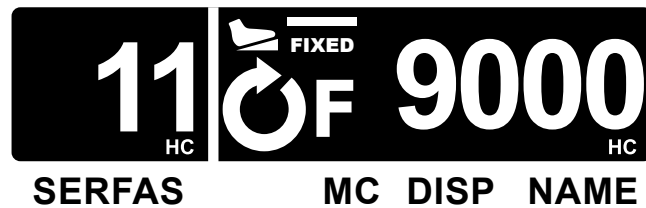




- dual mode
- RF probe controlled by footswitch





Adjusting Handpiece Settings with the Console

In dual mode, settings can be adjusted for whichever handpiece appears on the right side of the LCD.

1. Press select  to move the desired handpiece to the right side of the LCD.
2. Use the adjust buttons   on the console to manually adjust the power or speed setting for the selected handpiece.



Adjusting Cutting Speed

Use the adjust buttons   on the console to manually adjust the power or speed setting for the active handpiece.

Notes:

- In shaver mode, the console uses radio frequency identification (RFID) to automatically detect which type of disposable attachment is connected to the handpiece. Upon recognition, the console adjusts to an optimal preset cutting speed, direction, and power.
- Forward and reverse settings are adjusted independent of each other. Adjusting settings in one mode will not affect the other.

System Feedback

Event	Audible Feedback	Visible Feedback (via LCD)
Reverse activated	five high beeps	
Forward activated/resumed	low beep	
Adjustments made to speed settings	one beep for each unit of change	Speed indicator number increases or decreases


Troubleshooting

	Problem	Solution
Console	A hardware fault is detected	<ul style="list-style-type: none"> Turn the power off and on again. If the problem persists, contact a Stryker representative or return the console for repair.
	The AC voltage is incorrect	<ul style="list-style-type: none"> Turn the power off and on again. If the problem persists, contact a Stryker representative or return the console for repair.
	A software fault is detected	<ul style="list-style-type: none"> Turn the power off and on again. If the problem persists, contact a Stryker representative or return the console for repair.
	The system does not power on	<ul style="list-style-type: none"> Check the power cord to ensure it is properly connected. Check to ensure the cord is connected to a grounded outlet.
	The electrical interference is sporadic	<ul style="list-style-type: none"> Power down all electrical equipment not in use. Increase distance of other electrical equipment. Connect the unit and other equipment into different outlets.
	The generator temperature is too high	<ul style="list-style-type: none"> Ensure that there is proper airflow around the unit.
	A power-on self test error has occurred	<ul style="list-style-type: none"> Turn the power off and on again. If the problem persists, contact a Stryker representative or return the console for repair.
Handpiece	The temperature is higher than normal	<ul style="list-style-type: none"> Allow the unit to cool before restarting.
	The unit has reached its recommended service interval	<ul style="list-style-type: none"> Contact your Stryker representative.
Disposable Attachments	RF probe is not ready	<ul style="list-style-type: none"> Check the connection to the console.
	RF probe is expired	<ul style="list-style-type: none"> Replace probe.
	RF probe identification is invalid	<ul style="list-style-type: none"> Replace probe.
	RF probe communication error	<ul style="list-style-type: none"> Check the connection to the console. If necessary, replace probe.

Disposable Attachment (Continued)	Exceeded time usage	<ul style="list-style-type: none"> Replace probe
	RF power is too high	<ul style="list-style-type: none"> Check the probe for damage. If necessary, replace probe.
	RF voltage is too high	<ul style="list-style-type: none"> Check the probe for damage. If necessary, replace probe.
	RF current is too high	<ul style="list-style-type: none"> Check the probe for damage. If necessary, replace probe.
	RF delivery has exceeded continuous limit	<ul style="list-style-type: none"> Clear error and continue
	Low impedance detected	<ul style="list-style-type: none"> Check the probe for damage. If necessary, replace probe.
Footswitch	A wireless footswitch is not detected	<ul style="list-style-type: none"> Disconnect the wired footswitch.
	The footswitch icon does not appear	<ul style="list-style-type: none"> Ensure the unit is connected. Ensure that there is no damage to the cable or connector.

Error Codes

When the Crossfire 2 system encounters an error, it will display an error code on the LCD. Error codes are grouped into general categories that share common solutions:

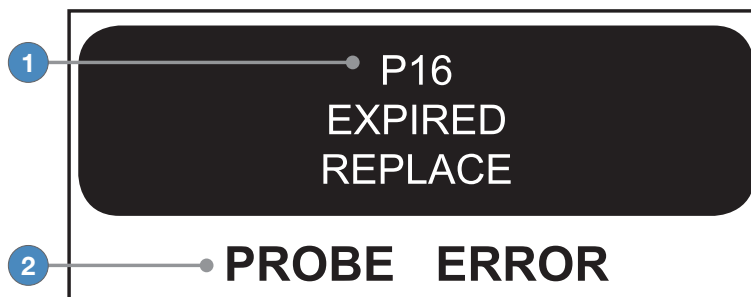

Error Code	Category	Solution
A##	Activation Errors	Reactivate
E##	System-level Errors	Reboot system
P##	Probe Errors	Follow instructions on LCD, or replace disposable attachment
W##	Warning Errors	No action required; informational only
	RF probe communication error	Check the connection to the console. If necessary, replace probe.

Cleaning and Maintenance

Cleaning

Warning

To avoid electric shock and potentially fatal injury, unplug the Crossfire 2 console from the electrical outlet before cleaning.

Caution

- Do not spray cleaning liquid directly onto the unit as product damage may result. Spray on the cloth before wiping the unit.
- Do not immerse the console in any liquid as product damage will result.
- Do not use corrosive cleaning solutions to clean the unit as product damage may result.
- Do not sterilize the unit as product damage may result.

Console

Should the unit need cleaning:

1. Spray cleaning liquid onto a dry, sterile cloth. Avoid excess liquid or drips.
2. Wipe the unit.
3. Take extra care when cleaning the front LCD screen. Excess liquid or drips that enter the bottom of the screen may result in product damage.

Footswitch

Consult the footswitch user guide for cleaning and reprocessing instructions.

RF Handpiece

RF handpieces are intended for single use only and should not be cleaned, sterilized, or reused.

Shaver Handpiece

Consult the appropriate user guide for cleaning and reprocessing instructions.

Disposable attachments are intended for single use only and should not be cleaned, sterilized, or reused.

Maintenance

The Crossfire 2 console requires no preventative or periodic maintenance. However, Stryker recommends you reboot the system daily for best performance.

Disposal



This product contains electrical waste or electronic equipment. It must not be disposed of as unsorted municipal waste and must be collected separately in accordance with applicable national or institutional related policies relating to obsolete electronic equipment.

Follow hospital procedure to dispose of any contaminated disposable system accessories.



The Batteries Directive 2006/66/EC introduces new requirements from September 2008 on removability of batteries from waste equipment in EU Member States. To comply with this Directive, this device has been designed for safe removal of the batteries at end-of-life by a waste treatment facility. Infected units should be decontaminated before they are sent for recycling. In the case that it is not possible to decontaminate the unit for recycling, the hospital should not attempt to remove the batteries from waste equipment. Continued disposal of small amounts of portable batteries to landfill and incineration is allowed under the Batteries Directive 2006/66/EC and Member State regulations.

Technical Specifications

Stryker Endoscopy reserves the right to make improvements to the product(s) described herein. Product(s), therefore, may not agree in detail to the published design or specifications. All specifications are subject to change without notice. Please contact the local Stryker Endoscopy distributor or call your local Stryker Endoscopy sales representative or agent for information on changes and new products.

Dimensions

Size: 16.9" L × 12.5" H × 4.5" W
Weight: 20 lbs

Environmental Specifications

Operating temperature: 5 – 40°C
Operating humidity: 30 – 95% RH
Shipping temperature: -18 – 60°C
Shipping humidity: 15 – 90% RH

System Input Power Requirements

Input: 100-240 VAC, 50/60 Hz, 6 – 10 A
Output: 400 W @ 200 ohms, 200 KHz
Inlet Fuse: 16AH, 250V


Electrical Specifications

Motor output max speed: 12000 RPM
Motor duty cycle: Continuous operation
RF output waveform: 200 kHz ± 1%, square wave,
Crest factor <1.5 @ 200 ohms


Generator Output

Output power at each set point with specified load resistance (per IEC 60601-2-2, sub clause 6.8.3) is given in the graphs below.


Output Power versus Setting at 200ohms Resistive Load

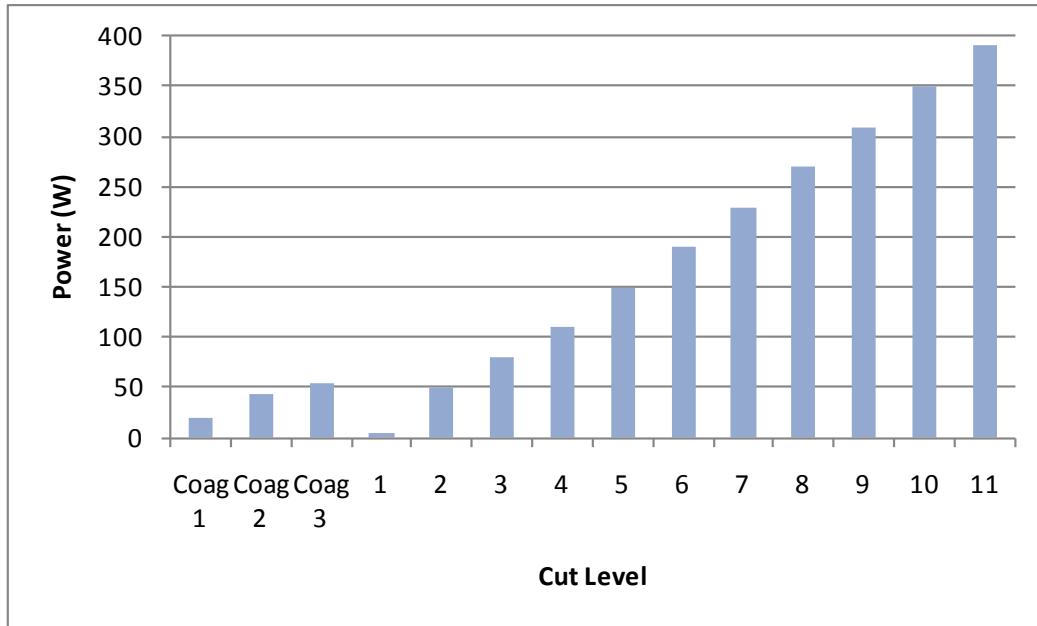


Output Power (CUT) versus Load Resistance

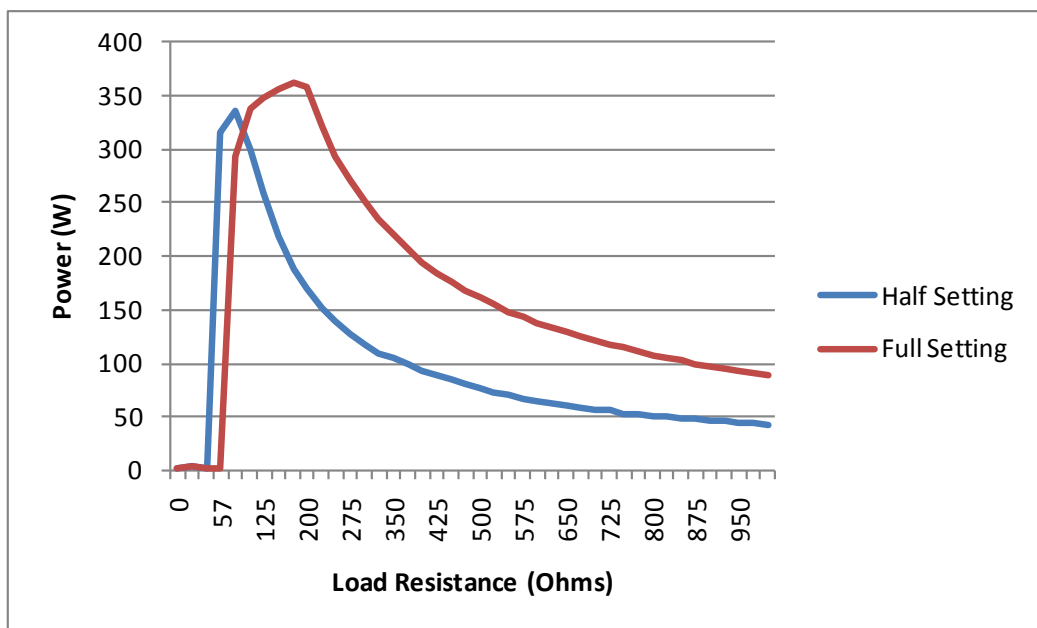

Output Power (COAG) versus Load Resistance

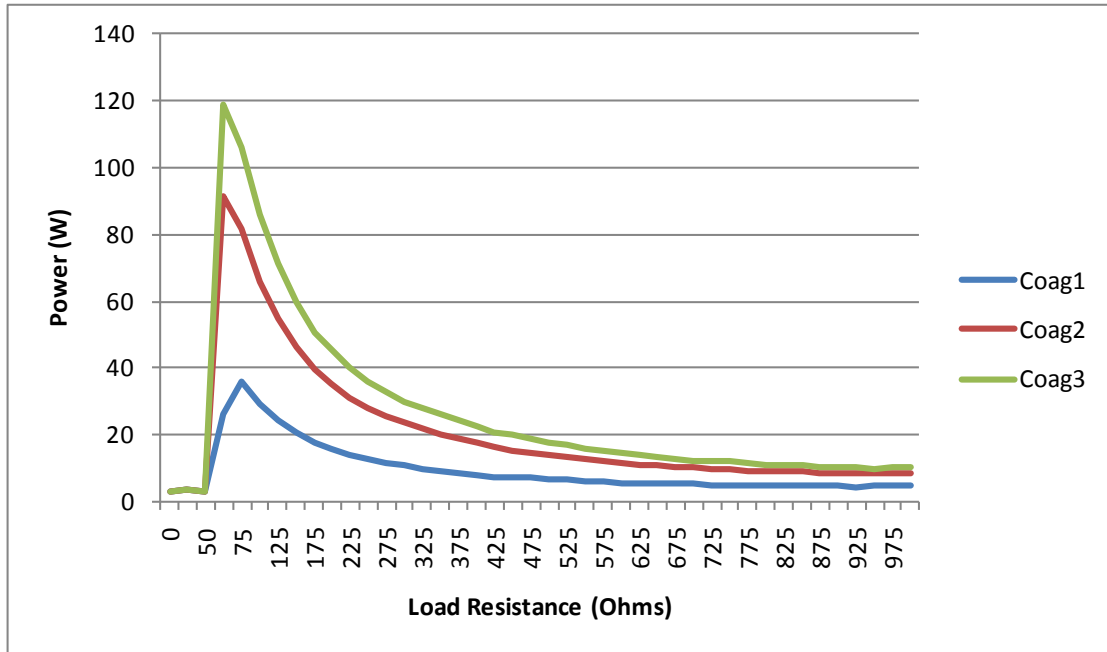

Maximum Open Circuit Voltage Versus Set Point

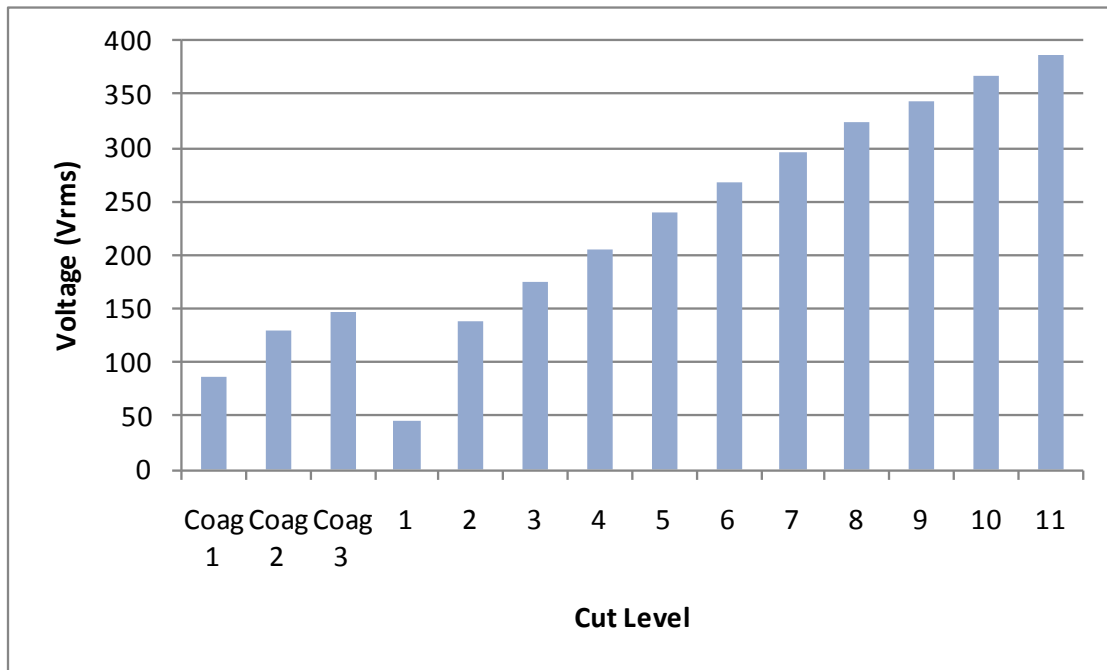

Classifications



Warning

This equipment is not suitable for use in the presence of a flammable anesthetic mixture with air, oxygen, or nitrous oxide.

Class I Medical Electrical Equipment

Type BF applied part

Degree of protection against harmful ingress of water: IPX0

Federal Communications Commission (FCC)

FCC ID: SSH-XFC2

Trade Name: Crossfire 2 Console

Type or Model: 0475100000

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: FCC regulations provide that changes or modifications not expressly approved by Stryker Endoscopy could void your authority to operate this equipment.

Frequency of transmission: 13.56MHz

Type of frequency / characteristics of the modulation: 10% ASK

Subcarrier: 423.75kHz, Manchester coding

Effective radiated power: 50 μ W

Industry Canada (IC)

IC: 4919C-XFC2

Trade Name: Crossfire 2 Console

Type or Model: 0475100000

Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC" before the radio certification number only signifies that Industry Canada technical specifications were met.

Radio Equipment Directive Compliance

Hereby, Stryker Endoscopy declares that the radio equipment listed below is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.stryker.com/en-us/Divisions/Endoscopy/IFUs/index.htm.

Search by the product number and refer to the resulting Declaration of Conformity for that product.

Type or Model: 0475100000

Product Name: Crossfire 2 Console

Electromagnetic Compatibility

Like other electrical medical equipment, the Crossfire 2 System requires special precautions to ensure electromagnetic compatibility with other electrical medical devices. To ensure electromagnetic compatibility (EMC), the Crossfire 2 System must be installed and operated according to the EMC information provided in this manual.

The Crossfire 2 System has been designed and tested to comply with IEC 60601-1-2:2001 requirements for EMC with other devices.

Warnings

- This equipment is intended for use by health care professionals only. This equipment may cause radio interference or may disrupt the operation of nearby equipment. It may be necessary to take mitigation measures, such as reorienting or relocating the equipment or shielding the location.
- Portable and mobile RF communications equipment can affect the normal function of the Crossfire 2 System even if such equipment meets the applicable emissions requirements.
- Do not use cables or accessories other than those provided with the Crossfire 2 System, as this may result in increased electromagnetic emissions or decreased immunity to such emissions.
- If the Crossfire 2 System is used adjacent to or stacked with other equipment, observe and verify normal operation of the Crossfire 2 System in the configuration in which it will be used prior to using it in a surgical procedure as interference may occur. Consult the tables below for guidance in placing the Crossfire 2 System.
- When the Crossfire 2 System is interconnected with other medical electrical equipment, leakage currents may be additive. To minimize total patient leakage current, any Type BF applied part should be used together with other Type BF applied parts. Ensure all systems are installed according to the requirements of IEC 60601-1-1.


Guidance and Manufacturer's Declaration: Electromagnetic Emissions

The Crossfire 2 System is intended for use in the electromagnetic environment specified below. The customer or the user of Crossfire 2 System should ensure that it is used in such an environment.

Emissions Test	Compliance	Electromagnetic Environment - Guidance
RF emissions CISPR11	Group 1	The Crossfire 2 System must emit electromagnetic energy in order to perform its intended function. Nearby electronic equipment may be affected.
RF emissions CISPR11	Class A	Crossfire 2 System is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage Fluctuations/flicker emissions IEC 61000-3-3	Complies	

Guidance and Manufacturer's Declaration: Electromagnetic Immunity			
The Crossfire 2 System is intended for use in the electromagnetic environment specified below. The customer or the user of Crossfire 2 System should ensure that it is used in such an environment			
Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - guidance
Electrostatic Discharge (ESD) IEC61000-4-2	±6kV contact ±8kV air	±6kV contact ±8kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC61000-4-4	±2kV for power supply lines	±2kV for power supply lines	Mains power quality should be that of a typical commercial or hospital environment
	±1kV for input/output lines	±1kV for input/output lines	
Surge IEC61000-4-5	±1kV differential mode	±1kV differential mode	Mains power quality should be that of a typical commercial or hospital environment
	±2kV common mode	±2kV common mode	
Voltage dips, short interruptions and voltage variations on power supply input lines IEC61000-4-11	<5% Ut (>95% dip in Ut) for 0.5 cycle	<5% Ut (>95% dip in Ut) for 0.5 cycle	Mains power quality should be that of a typical commercial or hospital environment. If the user of Crossfire 2 requires continued operation during power mains interruptions, it is recommended that Crossfire 2 be powered from an uninterruptible power supply or a battery.
	40% Ut (60% dip in Ut) for 5 cycles	40% Ut (60% dip in Ut) for 5 cycles	
	70% Ut (30% dip in Ut) for 25 cycles	70% Ut (30% dip in Ut) for 25 cycles	
	<5% Ut (>95% dip in Ut) for 5 sec	<5% Ut (>95% dip in Ut) for 5 sec	
Power frequency (50/60Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE: Ut is the a.c. mains voltage prior to application of the test level.			

Guidance and Manufacturer's Declaration--Electromagnetic Immunity			
Crossfire 2 System is intended for use in the electromagnetic environment specified below. The customer or the user of Crossfire 2 System should ensure that it is used in such an environment.			
Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment--Guidance
			Portable and mobile RF communications equipment should be used no closer to any part of the Crossfire 2 system, including its cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	3 V	Recommended Separation Distance: $d = 1.2\sqrt{P}$

Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m	$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey (a), should be less than the compliance level in each frequency range (b). Interference may occur in the vicinity of equipment marked with the following symbol: 
NOTE 1: At 80 MHz and 800 MHz, the higher frequency range applies.			
NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.			
(a) Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast, and TV broadcast, cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the Crossfire 2 System is used exceeds the applicable RF compliance level above, the Crossfire 2 System should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the Crossfire 2 System.			
(b) Over the frequency range 150 kHz to 80 Mhz, field strengths should be less than 3 V/m.			

Recommended Separation Distances Between Portable and Mobile RF Communications Equipment and the Crossfire 2 System			
The Crossfire 2 System is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The user of the Crossfire 2 System can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the Crossfire 2 System as recommended below, according to the maximum output power of the communications equipment.			
Rated maximum output power (W) of transmitter	Separation distance (m) according to frequency of transmitter		
	150 kHz to 80 MHz	80 MHz to 800 MHz	800 MHz to 2.5 GHz
0.01	0.12	0.12	0.23
0.1	0.37	0.37	0.74
1	1.2	1.2	3.7
10	3.7	2.3	7.4
100	11.7	11.7	23.3
For transmitters rated at a maximum output power not listed above, the recommended separation distance (d) in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.			
NOTE 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.			
NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.			

Symbols

This device and its labeling contain symbols that provide important information for the safe and proper use of the device. These symbols are defined below.

Warning



Follow instructions for use



Warning



Caution



Dangerous voltage

Front Console



On / Off



Select



Up



Down



Menu



Footswitch



RF probe



Shaver handpiece



Type BF applied part

Rear Console



Equipotentiality



USB



Stryker firewire



Emits RF radiation



Protective earth (ground)



Equipotentiality



Fuse rating



Compliant to CSA C22.2 No. 601.1-M90, and UL 601-1



Fulfills requirements of the European Medical Device Directive 93/42/EEC



Alternating current



Does not contain the hazardous substances listed in China regulation SJ/T11364



This product contains electrical waste or electronic equipment. It must not be disposed of as unsorted municipal waste and must be collected separately.



Complies with Australian regulatory requirements, Supplier ID: N 17693

LCD



Electrosurgical unit



Contrast



Brightness



Sound

Packaging/Labeling



Manufacturer



Date of manufacture



Authorized representative in the European Community



Catalogue number



Serial number



Humidity limitation



Temperature limit



Atmospheric pressure limitation



Made in USA



Caution: Federal law (USA) restricts this device to sale by, or on the order of, a physician.



Fragile



Consult instructions for use



Stryker Endoscopy
5900 Optical Court
San Jose, CA 95138 USA
1-800-624-4422

U.S. Patents: www.stryker.com/patents

Stryker Corporation or its divisions or other corporate affiliated entities own, use or have applied for the following trademarks or service marks: Crossfire, SERFAS, iSwitch, and the Stryker logo. All other trademarks are trademarks of their respective owners or holders.

WCR: None



P13827F
2017/06